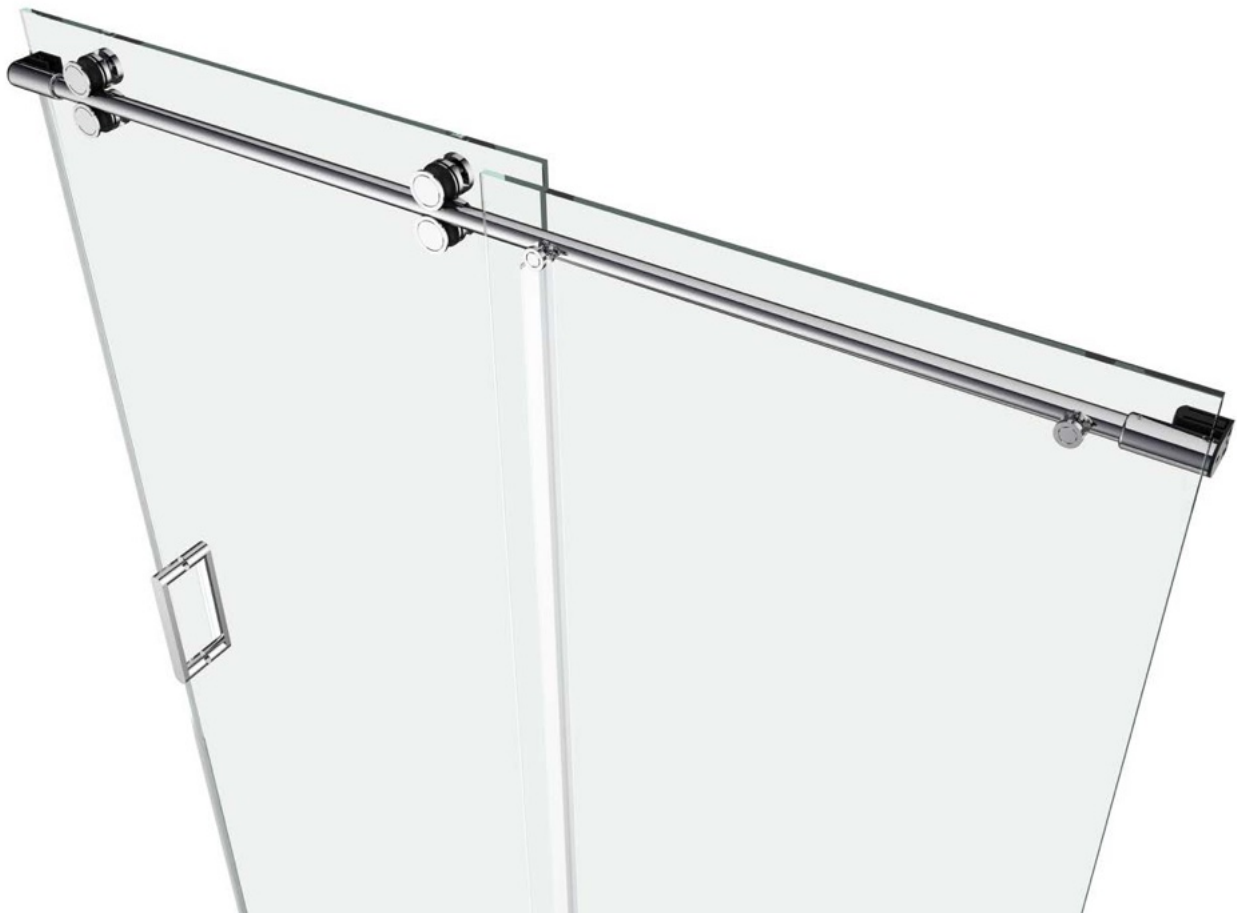# eurotech
LUXURY SHOWER DOORS

ROMA

EUROGLIDE FRAMELESS SINGLE SLIDING SHOWER DOOR

Eurotech Showers
23532 Commerce Center Dr
Building B
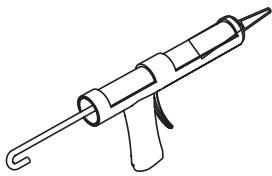Laguna Hills, CA 92653
949-716-4099
eurotechshowers.com

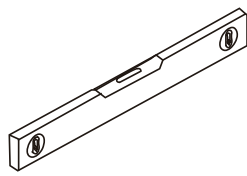HARDWARE FITS UP TO 72" WIDE OPENING

Tools Required
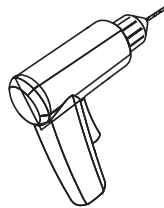
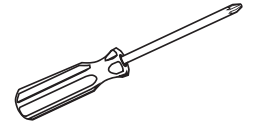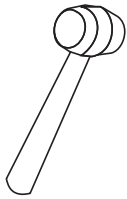|				
Silicone	Level	Drill	Masonry Bit	Screwdriver（Phillips）
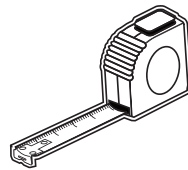
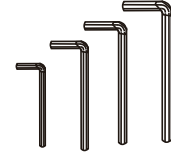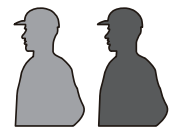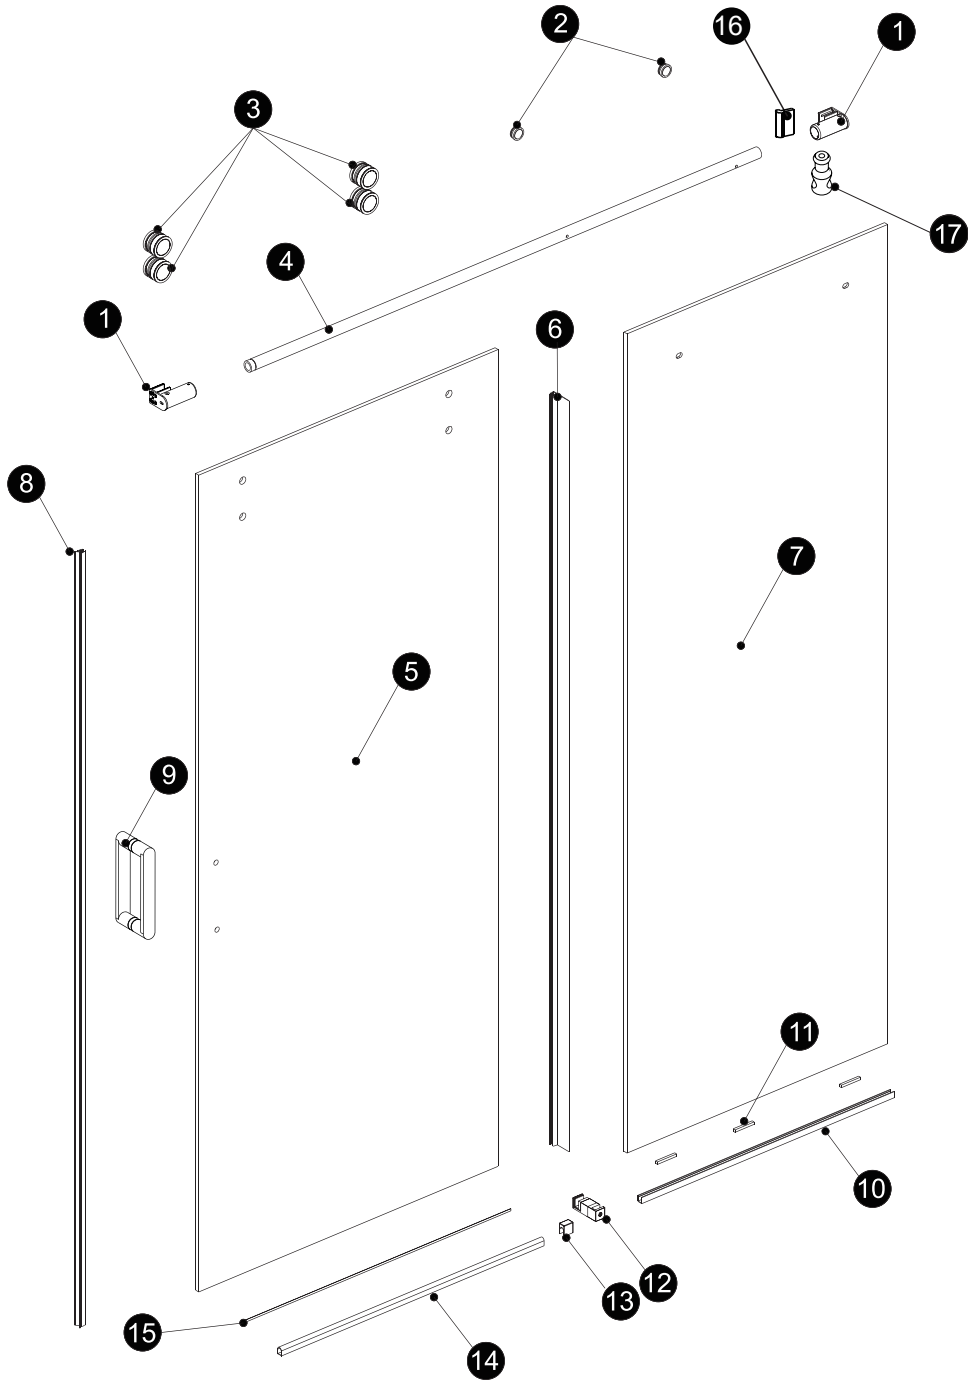|				
Mallot	Pencil	Tape Measurer	Painters Tape	Allen Wrenches (included)

⚠️ This product is heavy and may require two people to install.

Congratulations on your purchase of your Eurotech Shower door, making your shower dreams come to life.

◆ Assembly Drawing

PACKING LIST

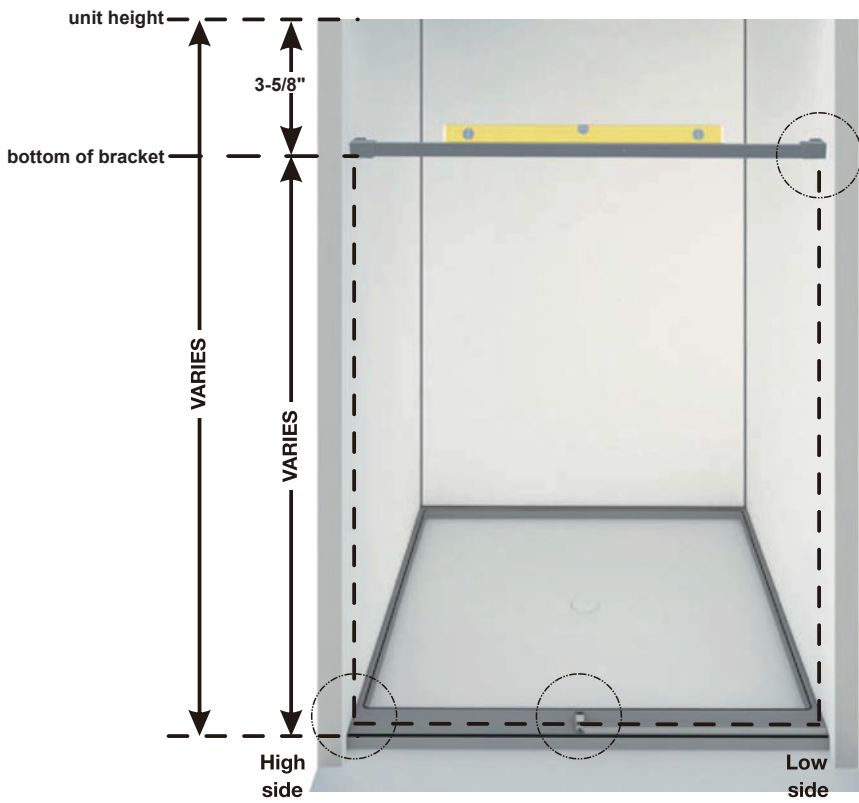| PART #	DESCRIPTION	Q'TY	PART #	DESCRIPTION	Q'TY
1	Wall Bracket	2pcs	10	Aluminium Bottom U Channel	1pc
2	Fixed Panel Holders	2pcs	11	1/4" Cushions	3pcs
3	Roller	4pcs	12	Bottom Guide	1pc
4	Track	1pc	13	End Block	1pc
5	Door Panel	1pc	14	Aluminium Water Guard	1pc
6	F Seal	1pc	15	L Seal	1pc
7	Fixed Panel	1pc	16	Safety Bumper	1pc
8	V Seal	1pc	17	Stopper	1pc
9	Handle	1pc			

Door inside left
*this configuration is illustrated in manual
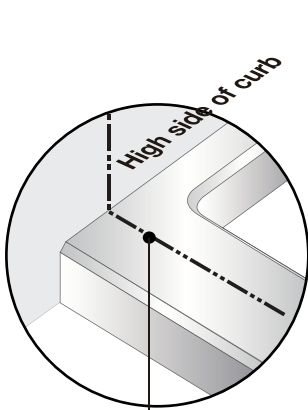

Door outside left

Door inside right
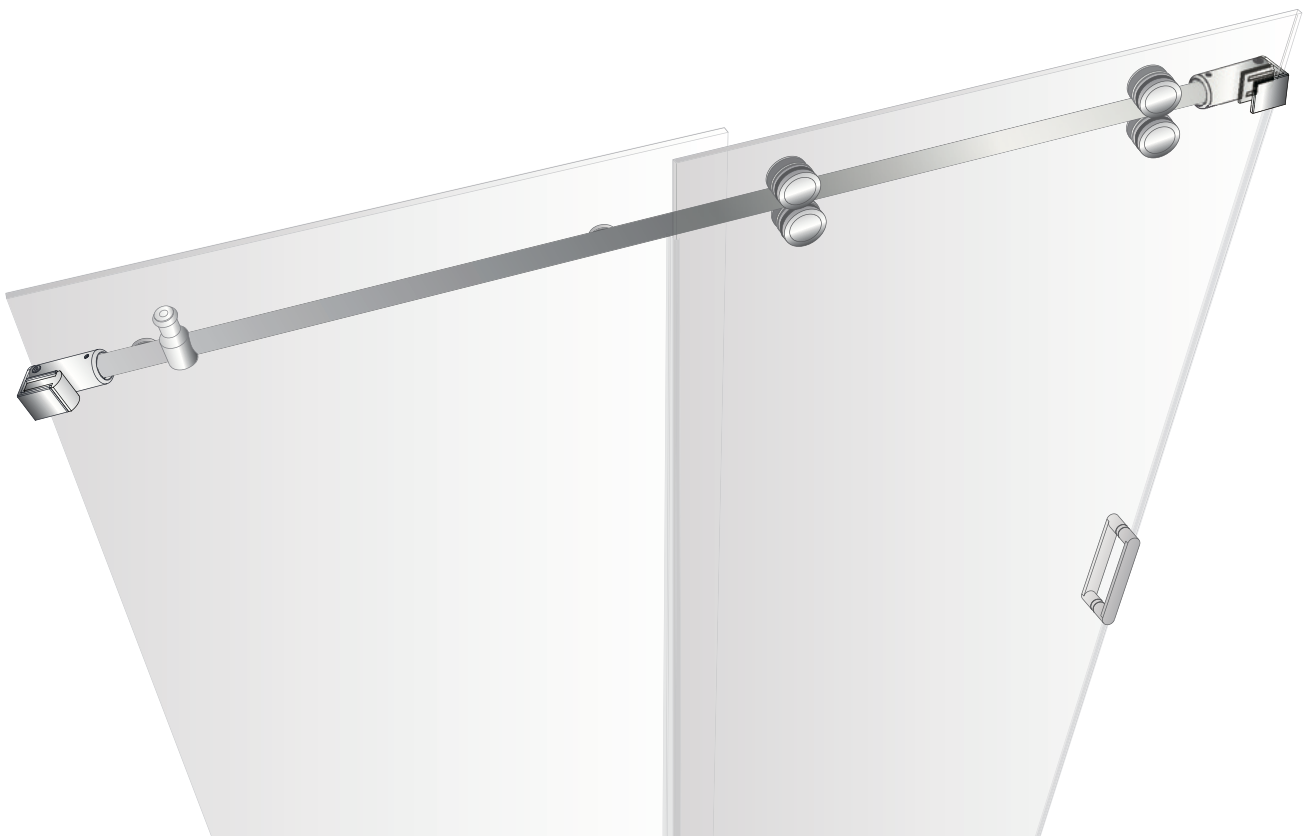
Door outside right

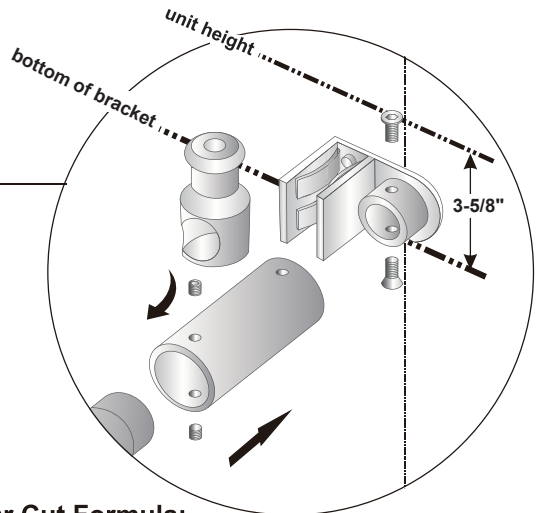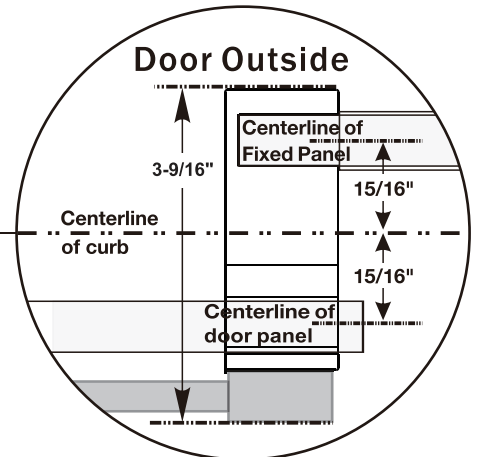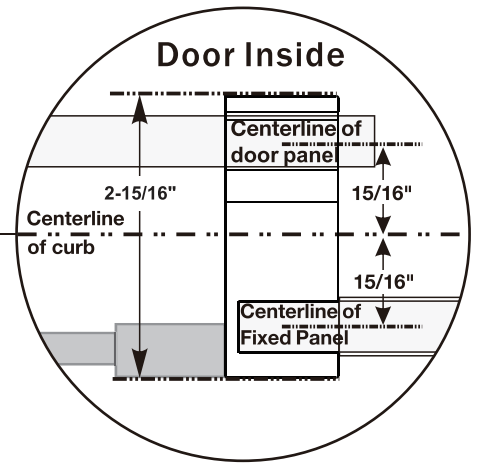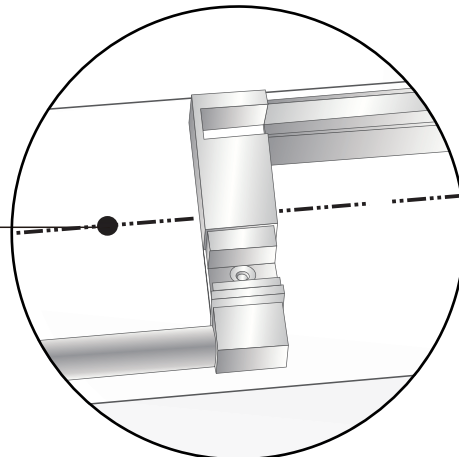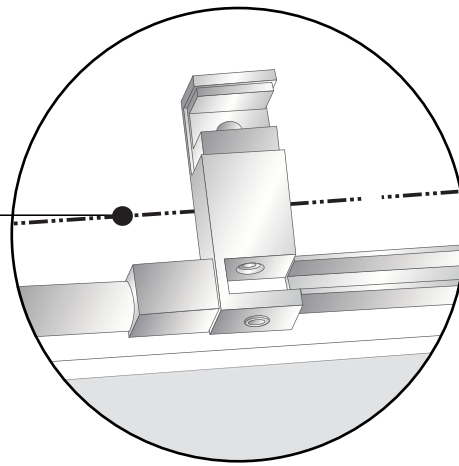Bar Installation: Mount wall bracket on high side of curb first. Level bar to mark opposite wall for second wall bracket.

unit height

3-5/8"

bottom of bracket

VARIES

VARIES

High
side

Low
side

unit height

bottom of bracket

3-5/8"

Bar Cut Formula:
overall width minus 2"

High side of curb

Centerline
of curb

Centerline
of curb

Door Inside

Centerline of
door panel

2-15/16"

Centerline
of curb

15/16"

15/16"

Centerline of
Fixed Panel

Door Outside

Centerline of
Fixed Panel

3-9/16"

Centerline
of curb

15/16"

15/16"
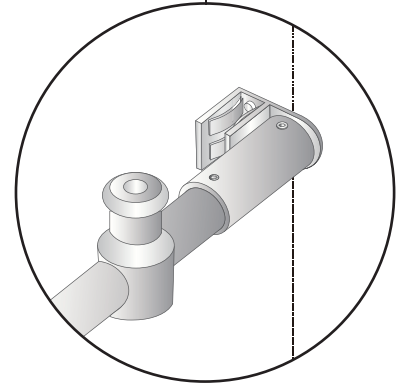
Centerline of
door panel

Aluminum Channel Cut Formula: overall fixed panel width minus 3/4"

Eccentric nut for roller adjustment.(Raises and lowers the roller.)Minimum spacing should be oriented towards the lowermost as shown for all rollers and pins.
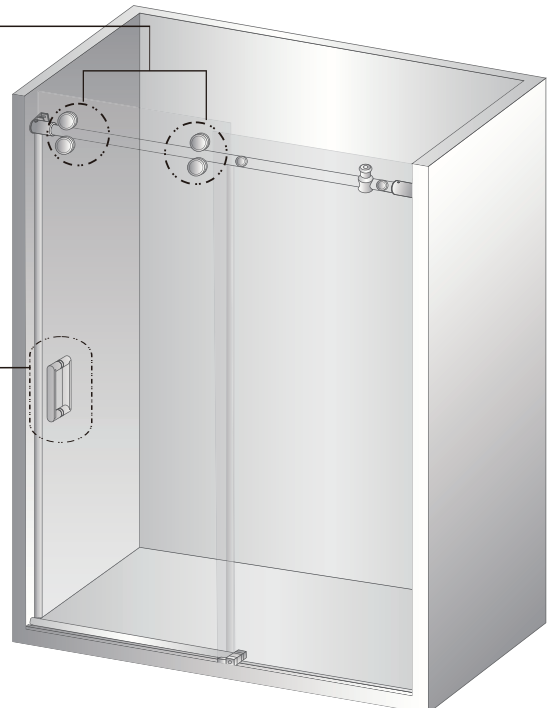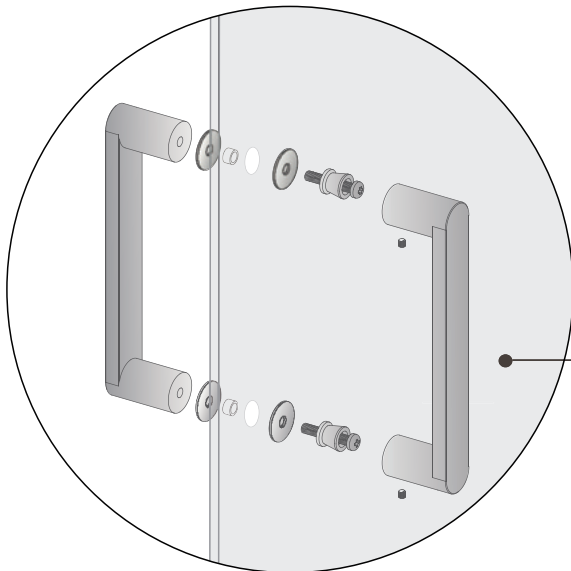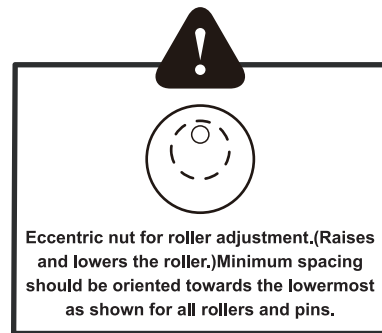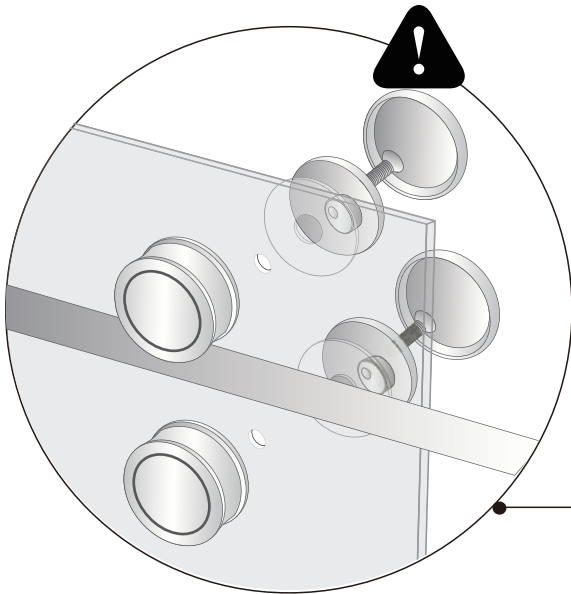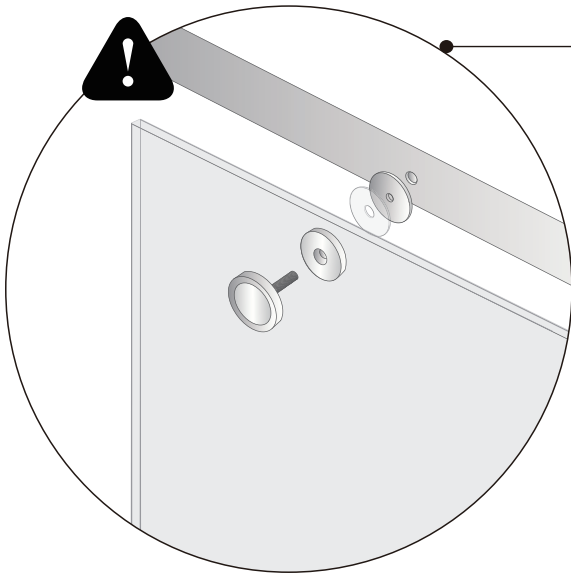
◆ Safety Bumper Page

For configurations with shower head to the left insert safety bumpers into wall brackets as shown
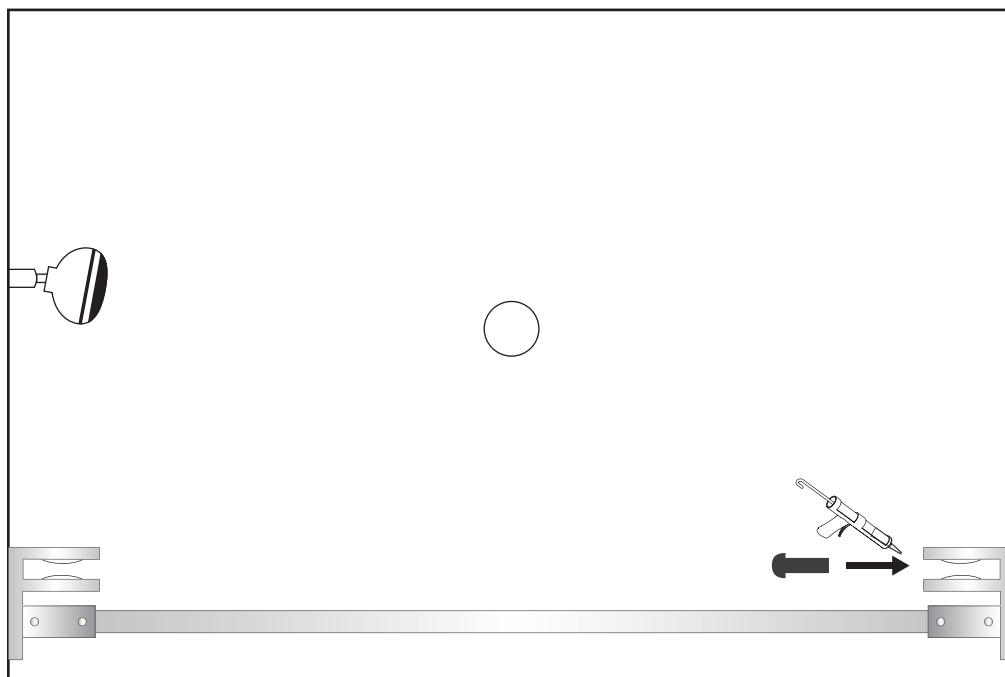
For configurations with shower head to the right insert safety bumpers into wall brackets as shown
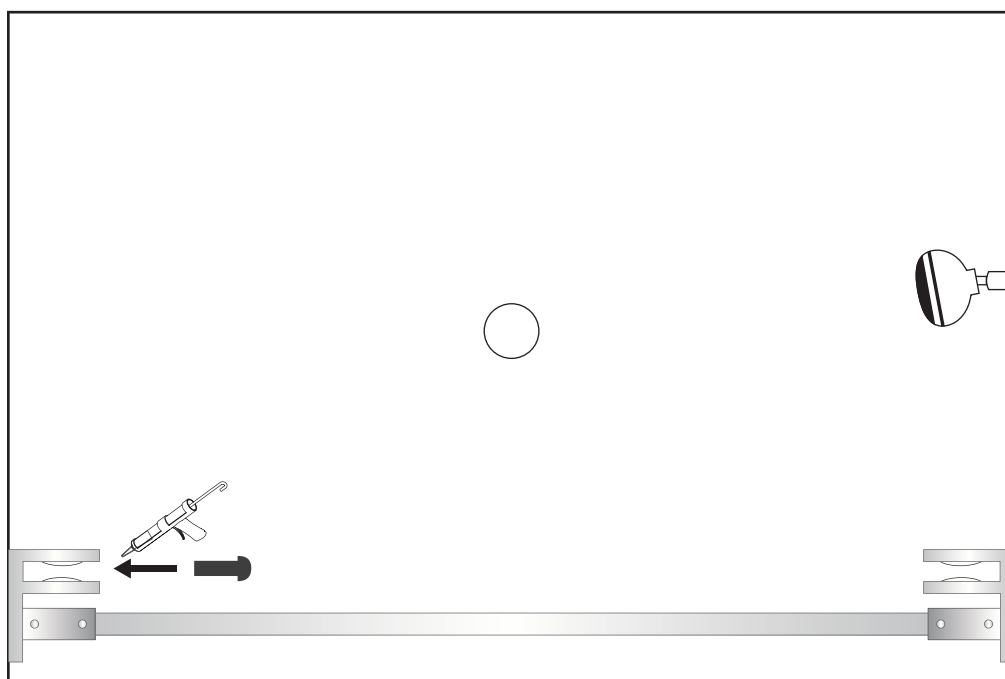
DO NOT OPERATE DOORS WITHOUT SAFETY BUMPERS AND SEALS PROPERLY INSTALLED

◆ **Seal Page**

eurotech
LUXURY SHOWER DOORS

V Seal

F Seal

Aluminum Water Guard

L seal

Preferred method: aluminum water guard

Optional method: polycarbonate L-seal

DO NOT OPERATE DOORS WITHOUT SAFETY BUMPERS AND SEALS PROPERLY INSTALLED